



EFI "Dead Head"

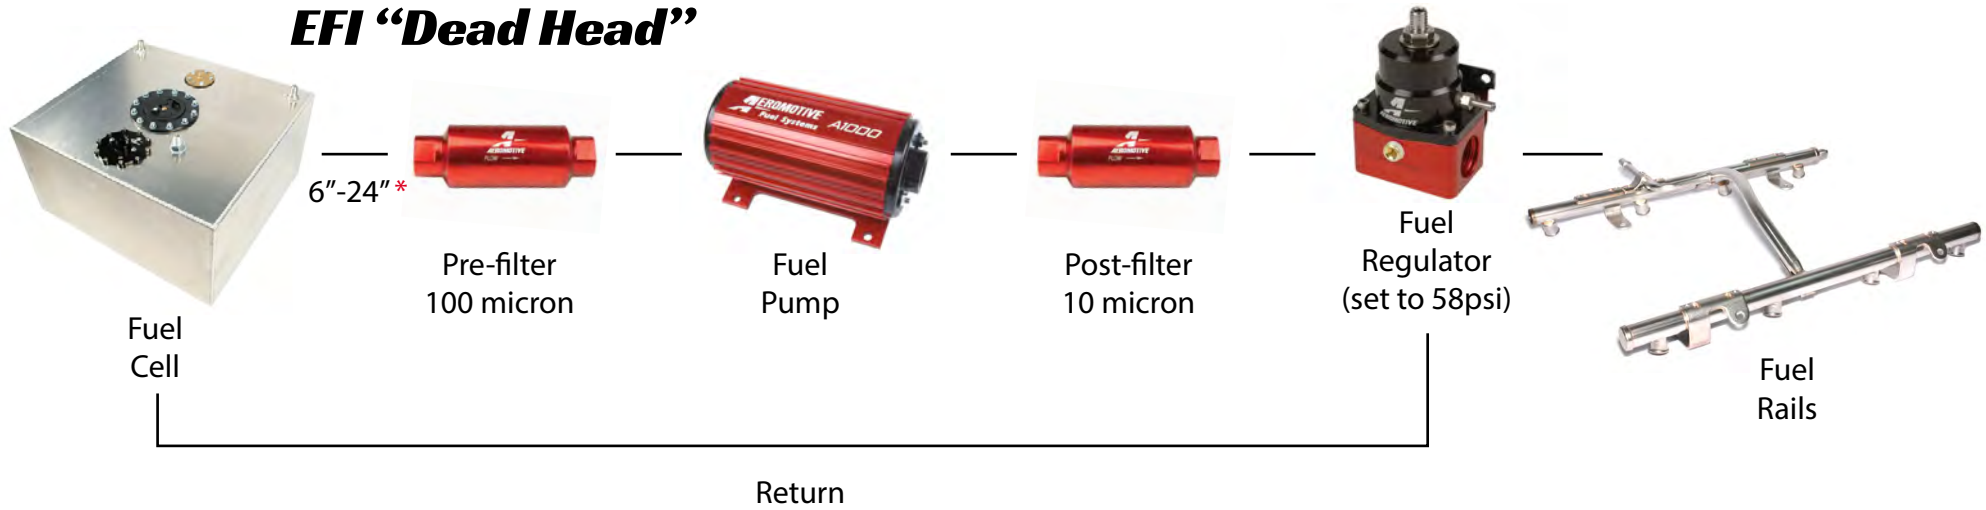

EFI "Full Flow"

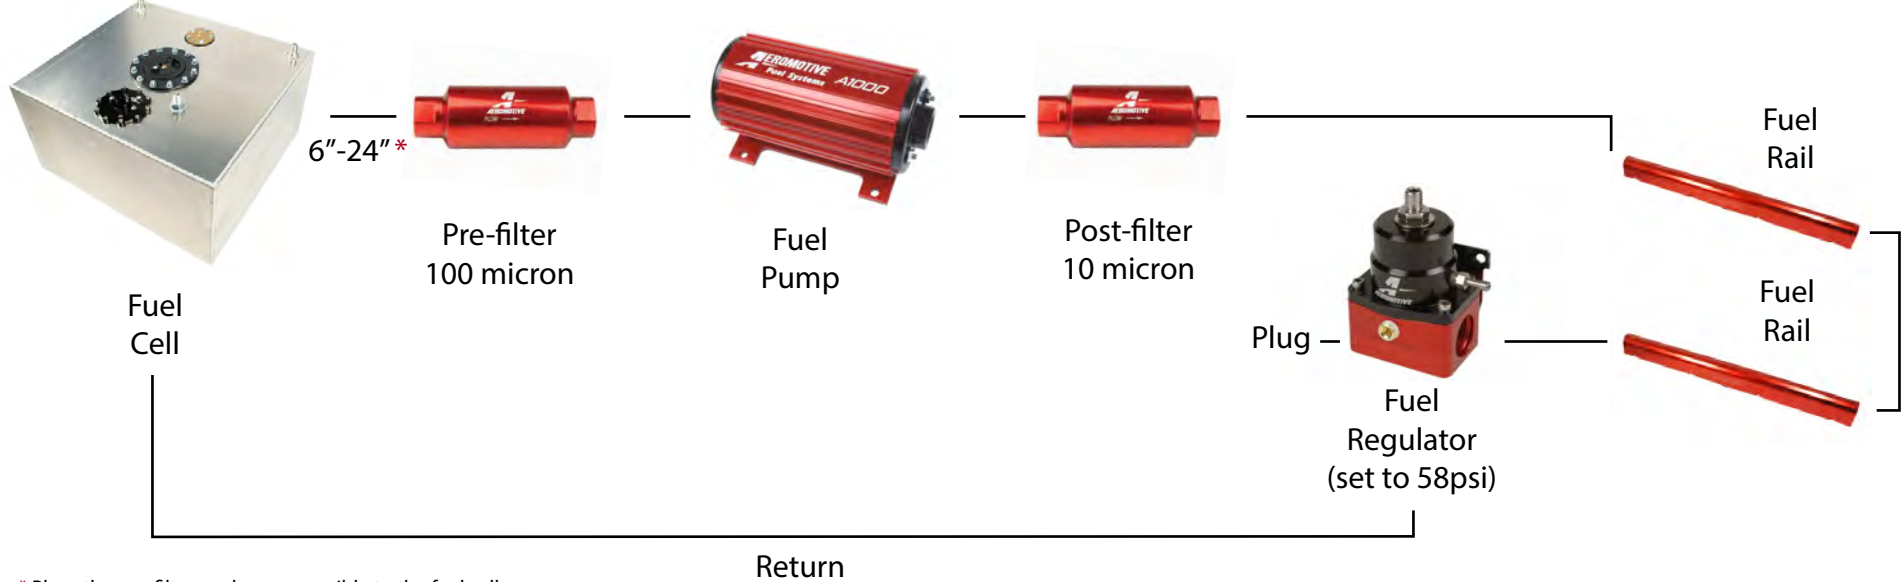

* Place the pre-filter as close as possible to the fuel cell.
Aeromotive parts are used for reference only, actual parts may vary.